

Allans Vehicle Services

Wixenford Depot, Plymstock, Plymouth, PL9 8AA

P: 01752 403400 ~ M: 07970 301013

E: hello@allansvehicleservices.co.uk ~ W: www.allansvehicleservices.co.uk

Disclaimer: This information is correct to the best of our knowledge but is followed at your own risk.

What the Warning Lights mean.

If any of the warning lights appear when driving, a fault is indicated. Follow the suggested procedures.

Exhaust Temperature Warning Light:



The light appears when the temperature of the catalytic converter is abnormally high.

- If it appears, stop driving. As there may be a lot of heat under the vehicle, park where there are no flammable materials such as grass. Stop the engine and allow it to cool.
 - Have the vehicle checked.

Brake Warning Light:



The light appears when:

Parking brake is applied.

Brake fluid is low.

Vacuum pressure of the braking system is low (diesel vehicle only).

- Have any faults fixed.


Battery Warning Light:



The light appears when there is a fault in the battery charging system.

- If it appears, have this checked.

Oil Pressure Warning Light:

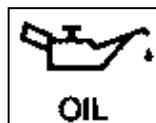

The light appears when there is abnormal pressure of the engine lubricating oil.

- If it appears, stop driving and have this checked.

Allans Vehicle Services

Wixenford Depot, Plymstock, Plymouth, PL9 8AA

P: 01752 403400 ~ M: 07970 301013

E: hello@allansvehicleservices.co.uk ~ W: www.allansvehicleservices.co.uk

Disclaimer: This information is correct to the best of our knowledge but is followed at your own risk.

Seat Belt Warning Light:



The light appears when the driver's seat belt is not fastened.

- Fasten the seat belt.

Door Ajar Warning Light:



The light appears when any of the doors are not properly closed.

- Stop and check each door is closed, until the light goes out.

ABS Warning Light:

(Not on all vehicles.)



The light appears when there is a fault in the Antilock Braking System.

- Have the system checked and repaired.

SRS Air Bag Warning Light:

(Not on all vehicles.)



The light appears or flashes when there is a fault in the air bag system.

- Have the system checked and repaired.

Allans Vehicle Services

Wixenford Depot, Plymstock, Plymouth, PL9 8AA

P: 01752 403400 ~ M: 07970 301013

E: hello@allansvehicleservices.co.uk ~ W: www.allansvehicleservices.co.uk

Disclaimer: This information is correct to the best of our knowledge but is followed at your own risk.

Automatic Rooftop Opening Warning Light:

(Not on all vehicles.)



The light appears when:

Operating the rooftop tent.

Rooftop is not closed properly and handbrake is released.

Rooftop opening is open when driving.

- Check the rooftop is either completely open or closed.
 - Check the handbrake is applied.
- If driving, stop driving and close the rooftop fully.

Scavenging Fan Warning Light (Petrol vehicle):

 
(Not on all vehicles.)



The light appears when there is a fault in the scavenging fan operation.

- Stop driving and have the fault fixed.

Scavenging Fan Warning Light (Diesel vehicle):



(Not on all vehicles.)

The light appears when there is a fault in the scavenging fan operation.

- Stop driving and have the fault fixed.

Sedimentation Water Tank Level (Diesel vehicle):



The light appears when the water level in the fuel sedimentation tank exceeds the limit.

- The tank needs to be emptied.

Allans Vehicle Services

Wixenford Depot, Plymstock, Plymouth, PL9 8AA


P: 01752 403400 ~ M: 07970 301013

E: hello@allansvehicleservices.co.uk ~ W: www.allansvehicleservices.co.uk

Disclaimer: This information is correct to the best of our knowledge but is followed at your own risk.

DISPLAY LIGHTS:

Headlight High Beam Light:

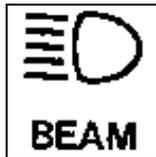

The light appears when the headlights are on high/main beam.

Indicator and Hazard Lights:



The light will flash when the indicators or hazard lights are used.

Hold Light (Automatic vehicle only):



The light will appear when the 'hold' function is used.

Preheating (Glowplug) Display Light (Diesel vehicle only):



The light appears when the Glowplugs are heating, to assist with engine start-up.

Engine should be started when it goes out.

- It can also appear when fuse no. 1 fails, and you will also notice that the radio is not working.

Rear Window Defogging Light:



The light appears when the rear window defog/demist is operating.