

Allans Vehicle Services

Wixenford Depot

Colesdown Hill

Plymouth

PL9 8AA

P. 01752 403400

M. 07970 301013

E. allan@allansvehicleservices.co.uk

W. allansvehicleservices.co.uk

We're also on Facebook, Twitter, Google+ LinkedIn and Pinterest!

The beeps on a Bongo are a safety feature.

The beeps sound when the key is in the ignition, the Bongo is reversing, or the AFT roof is in operation.

How to stop all the Bongo beeps without cutting wires.

Remove the kick panel from the drivers footwell: To do this, unclip the plastic step cover and remove the pop clip that holds the kick panel in place. Remove the door trip edge and slide the kick panel out.

You'll now see a blue box, with a white clip in the bottom of it.

Grip the blue box and pull the white clip out. It's usually a tight fit.

Tuck the white clip and wires out of place.

Replace the kick panel and other trim.

Job's done!

The beeping can be reinstated by reconnecting the white clip.



How to stop a Bongo beeping when the keys are in the ignition.

How to stop the beeping when the key's in the ignition and the door's open, without cutting wires!

Remove the lower cover on the steering column.

On the left side of the column, (under the wiper stalk), there is a small white connector (with 2 wires).

Simply pull the connector apart.

Job's done!

The beeping can be reinstated by reconnecting the connectors.